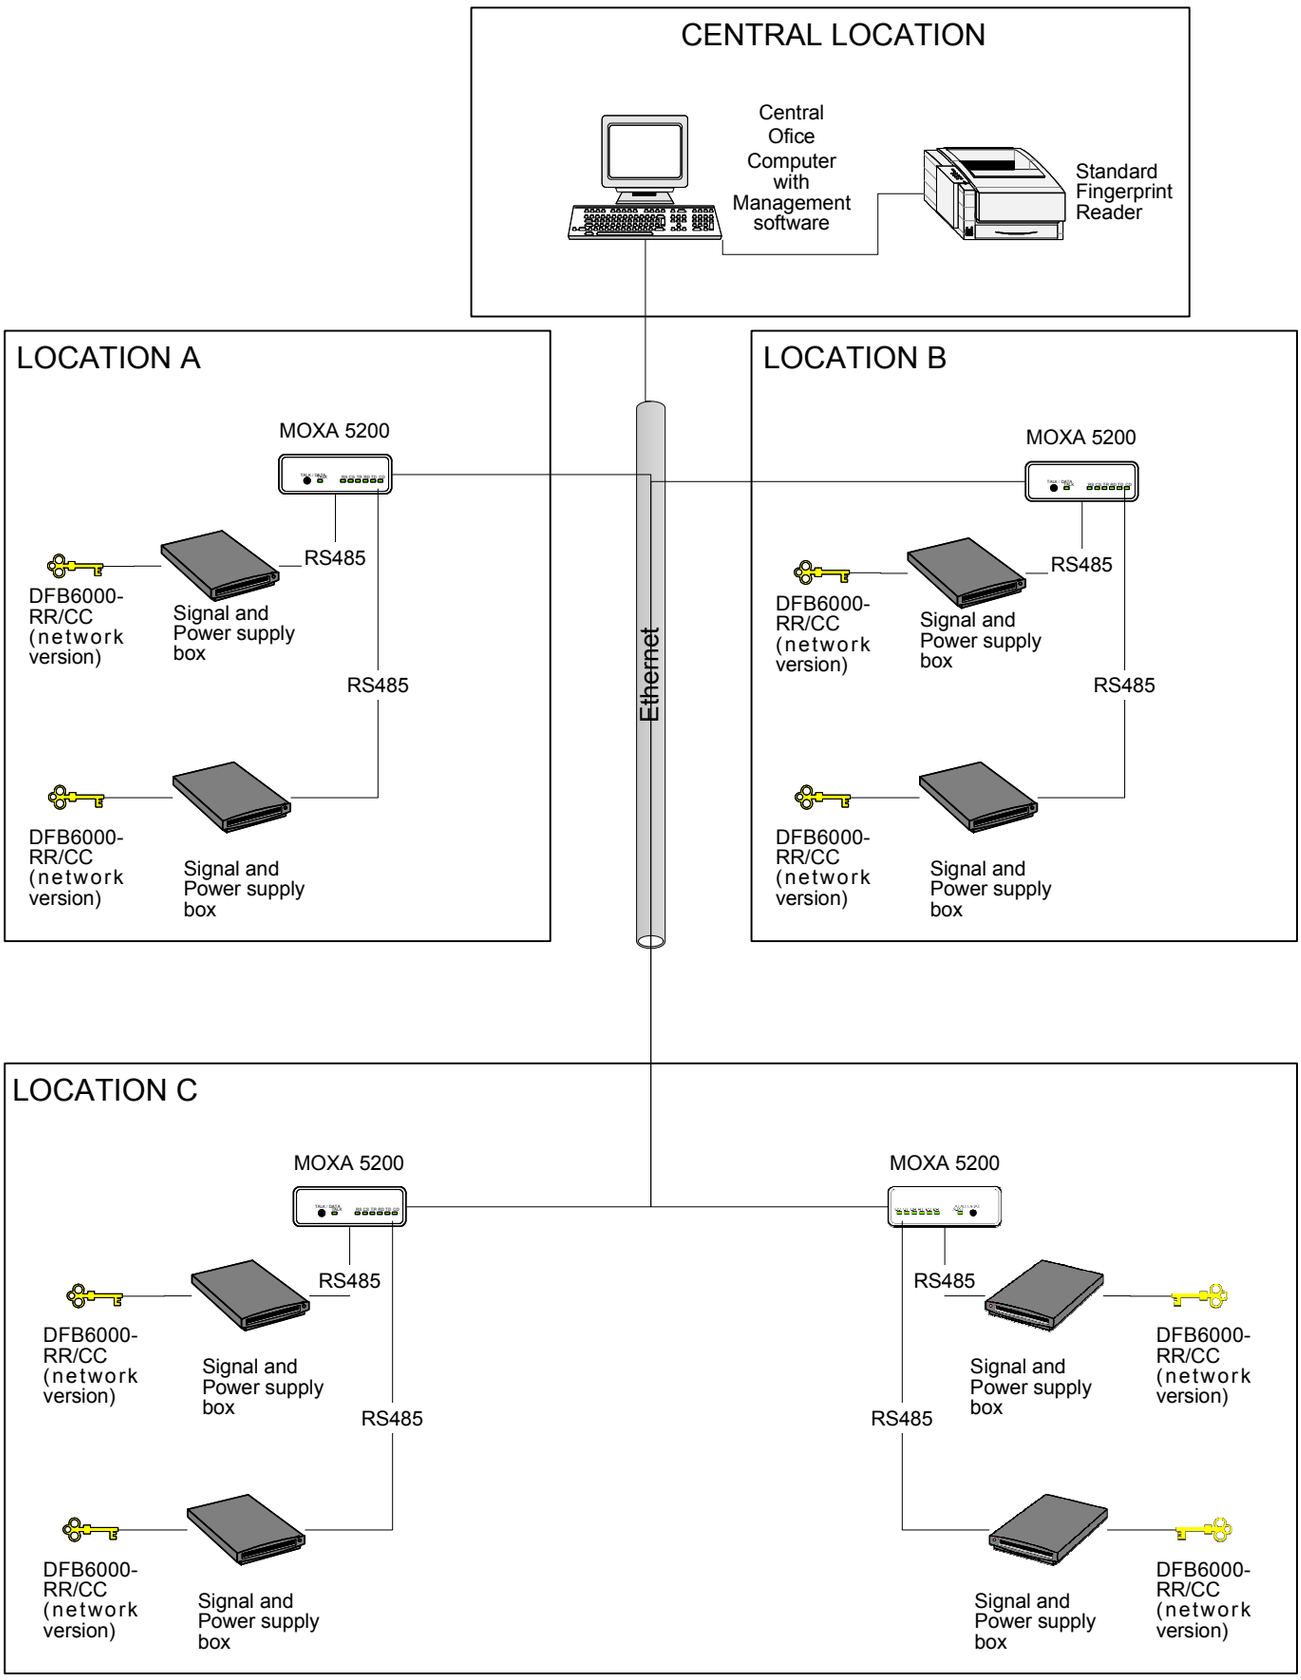
CENTRAL LOCATION
Central Ofice Computer with Management software
Standard Fingerprint Reader
LOCATION A
MOXA 5200
RS485
DFB6000-RR/CC (network version)
Signal and Power supply box
RS485
DFB6000-RR/CC (network version)
Signal and Power supply box
Ethernet
LOCATION B
MOXA 5200
RS485
DFB6000-RR/CC (network version)
Signal and Power supply box
RS485
DFB6000-RR/CC (network version)
Signal and Power supply box
LOCATION C
MOXA 5200
RS485
DFB6000-RR/CC (network version)
Signal and Power supply box
RS485
DFB6000-RR/CC (network version)
Signal and Power supply box
MOXA 5200
RS485
Signal and Power supply box
DFB6000-RR/CC (network version)
RS485
DFB6000-RR/CC (network version)
Signal and Power supply box